

Atlas Pendant

EP1101 1.0

VISUAL COMFORT & Co.

STUDIO COLLECTION

GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes. This product is safety listed for damp locations.


Incandescent lamps may be dimmed with a standard incandescent dimmer. LED lamps may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.

This instruction shows a typical installation.

CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°c supply conductors.

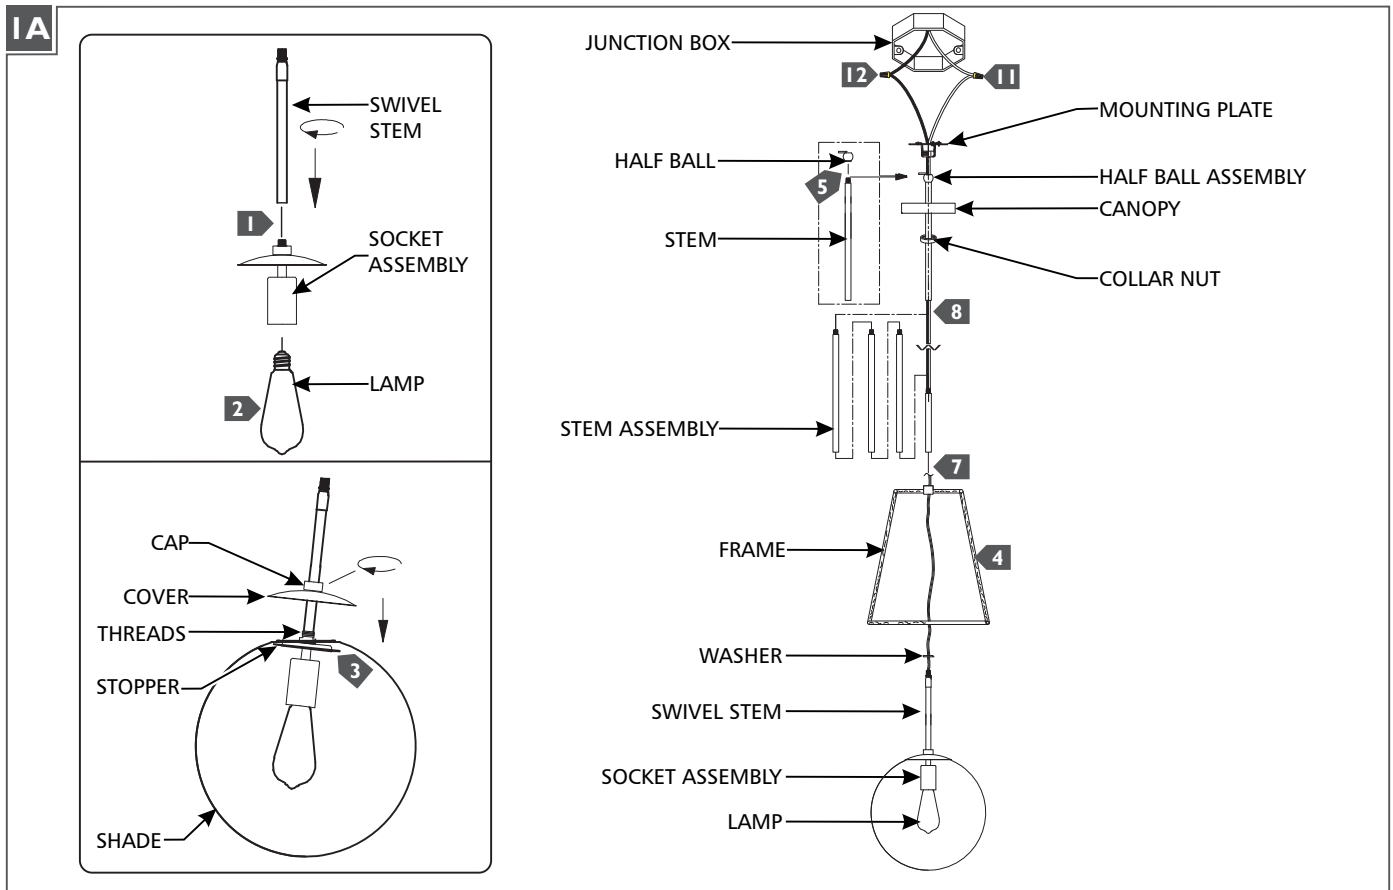

- 1** Feed the fixture wires through the swivel stem, then screw the swivel stem to the top of the socket assembly.
- 2** Screw the lamp into the socket. Refer to the label on the socket for Max Wattage Information.
- 3** Carefully insert the socket into the glass at an angle until the stopper is inside the glass, then lower the cover onto the glass, and secure in place by screwing the cap onto the threads above the stopper.
- 4** Feed the fixture wires through the washer and frame, then carefully lower the frame over the shade.
- 5** Screw the half ball to the stem which will be on top.
- 6** Determine the wanted height or look of the fixture with the provided stems, then assemble them by screwing them together.
- 7** Feed the fixture wires through the stem assembly, then screw the stem assembly to the top of the swivel stem.
- 8** Feed the fixture wires through the collar nut, canopy, and half ball assembly, then screw it onto the stem assembly.
- 9** Align and secure the mounting plate to the junction box, then slide the half ball assembly onto the mounting plate.
- 10** Connect the fixture to a suitable ground in accordance to local electrical codes.
- 11** Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 12** Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 13** Neatly place all the wires into the junction box, place the canopy onto the mounting plate and secure it in place by screwing the collar nut tightly onto the mounting plate.

SAVE THESE INSTRUCTIONS!